



FIGURE 2

## FLASHING WINDOW WHEN USING HOUSE WRAP


- 1 Create window opening

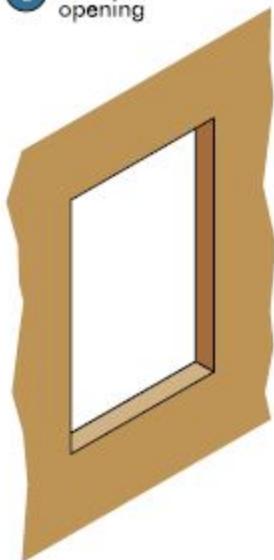


- 2 Apply house wrap and cut modified I

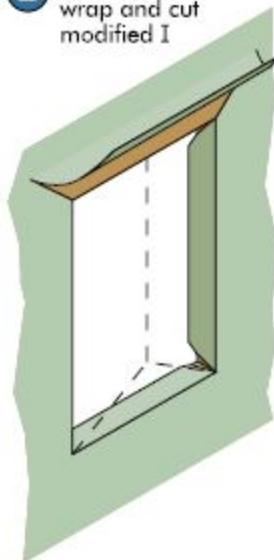


- 3 Apply sill flashing and window sealant

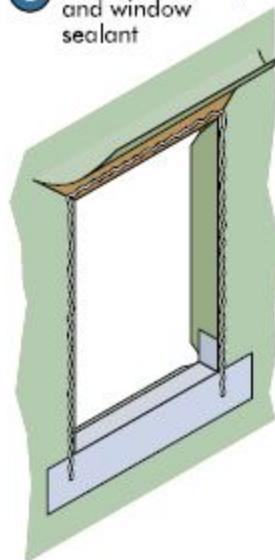


- 4 Install window and apply jamb flashing

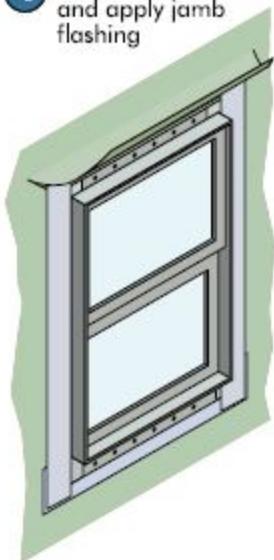

- 5 Apply head flashing

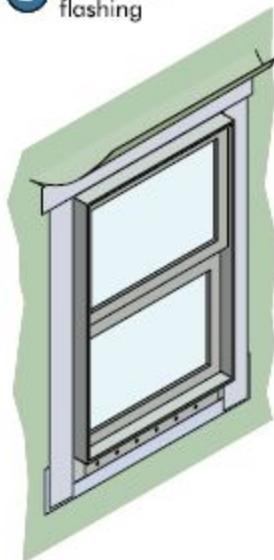

- 6 Fold housewrap down and tape over cuts

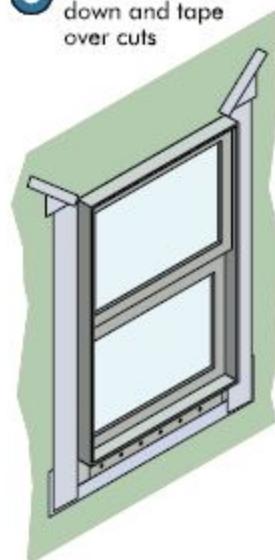

**Note:** In the case of single-wall construction consisting of siding applied direct to studs or over nonstructural sheathing, it may be necessary to attach the windows to the outside of the building. In such instances, refer to the manufacturer's recommended installation procedures.